



### **How to identify which Ubuntu version installed on your unit?**

Exist from the SuperImager/SuperCopier/SuperWiper main application into the Ubuntu main desktop screen.

Tap and click on the power icon (bottom right of the screen), and read the Ubuntu version from the header. (Example below show 16.04)

